




LANCASTER
ITALIA

USER MANUAL
for Miyota Caliber
8215 - 8205 - 821A - 820A
Ref. code: 0668 - 0691

USER MANUAL for Miyota Caliber 8215-8205-821A-820A

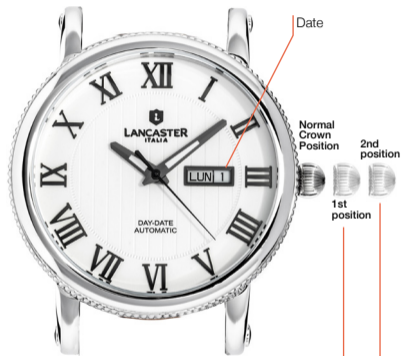

Set the date / Set the day

Set the time

Automatic Calibers and Function

- Movement 8215 – Date / Hours / Minutes / Seconds
- Movement 8205 – Day / Date / Hours / Minutes / Seconds
- Movement 821A – Date / Hours / Minutes / Seconds
- Movement 820A – Day / Date / Hours / Minutes / Seconds

RUNNING TIME: 42 hours
VIBRATION FREQUENCY PER HOUR: 21600
vibration.

Setting the time

- Pull out the crown to the second position
- Turn the crown to set hour and minute hands
- When the time is fixed push back the crown to the regular position (1) and second hand begins to run.

Setting the date and the day

- Pull out the crown to the first position
- Turn the crown counter-clockwise to set the date or the day
- After the date has been set, push the crown back to the regular position

Warnings

Automatic winding watch can also be hand wound by turning the crown in first position turning it 15-20 times and it will start to move naturally after shaking slightly.

Do not set date between 9:00 pm – 1:00 am

Do not set day between 1:00 am – 4:30 am

Date & day window position may be located at different position depending by the design of the watch.

For some Lancaster Watches with a “screw crown”, it is necessary, before doing the above operations, screw the crown and then push it back to its normal position and screw back it on after setting date and time.