



LANCASTER
ITALIA

USER MANUAL
for Miyota Caliber 82S7
Ref. Code: 0677

USER MANUAL for Miyota Caliber 82S7



AUTOMATIC MOVEMENT WITH FRONT VIEW SKELETON CAL. 82S7

1. BASIC SPECIFICATION

Small second hand
24 hour hand
Free See trough
Vibration frequency
Mainspring wounding Jewels
21 jewels

2. FUNCTION

Automatic & Hand winding and the one side mainspring winding up system.

3. OPERATION METHOD

Winding the mainspring, adjusting the hands are done by the below procedure.

a) Winding the mainspring

Automatic winding watch can also hand wound by screwing the crown for 15-20 time clockwise. It will start to move naturally after shaking slightly. After this operation, push the crown in its normal position.

b) Setting the time

1. Pull the crown to the 2nd click position.
 2. Turn the crown to set the hour and minute hands.
- *24 hour hand moves linked with the centre hour and minute hand.

Warning:

For some Lancaster Watches with a "screw crown", it is necessary, before doing the above operations, screw the crown and then push it back to its normal position and screw back it on after setting date and time.